



REF. 3886

AIRMAN double 24 09

CAL. 2424

## INSTRUCTION FOR PROPER USE

### CROWN AT 6 HOURS

**pos. 1** completely screwed tight: no correction possible

**pos. 2** crown unscrewed and slightly pulled to reach intermediate „correction“ position (click)

a) by turning left (counter-clock-wise), you select calendar day of the month.  
b) by turning right (clock-wise), you move the twin headed 24-hour hand.

**pos. 3** crown unscrewed and pulled out completely: normal time setting of hour and minute hand.

### SETTING OF TIME ZONES:

**1ST TIME ZONE:** hour and minute hand on the 24-hour scale on the dial (yellow or orange printed).

**2ND TIME ZONE:** operate as stated in par. 2b (above) and place the shorter part of the twin headed 24-hour hand (yellow or orange) on the desired 24-hour mark on the dial (yellow or orange)

It is recommended to adjust the twin headed 24 hour hand only when the minute hand is on position 24hour (yellow or orange scale) on the dial (clock hour). Choose the clock hour preceding your 1st time zone. After

selection of 2nd time zone, readjust the minute hand forward to correct time.

**3RD TIME ZONE:** release the screw crown at 4h (counter clock wise), turn the inner revolving ring until hour of 24-hour markings is opposite to the longer part of the twin headed arrow-tipped red 24 h hand

**4TH TIME ZONE:** release the steel bezel by turning the crown at 8h backwards. Turn the bezel until desired 24h marking is opposite to the hour hand (1st time zone)

If you change the selected 1st time zone on the dial, you have to adjust the selected 4th time zone on the bezel as well.

If you change the selected 2nd time zone on the dial, you have to adjust the selected 3rd time zone on the inner 24h ring as well.

In order to secure waterproof quality, it is essential to screw the crowns tight after every correction (press crown slightly against the case and start screwing movement)