



## INSTRUCTION FOR PROPER USE



### CROWN POSITIONS:

**pos. 1** Completely screwed tight: no correction possible

**pos. 2** Crown unscrewed and slightly pulled to reach intermediate "correction" position (click):  
a) by turning left (counter-clock-wise), you select calendar day of month;  
b) by turning right (clock-wise), you move red 24-hour-hand to the desired 24-hour mark on the dial.

**pos. 3** Crown unscrewed and pulled out completely: normal time setting of hour and minute hand.

### dial 8 hours:

pull crown to set time of 1st destination

### dial 4 hours:

pull crown to set time of 2nd destination

In order to secure waterproof quality, it is essential that you push, or push and screw, the crowns tight after every correction.

## AIRMAN 7 PLAZA MAYOR ETA 2893-2 & 2671-2

REF. 3861 / 3883 / 3884

AIRMAN 7 Plaza Mayor

ETA 2893-2 & 2671-2